



Outback Clotheslines


Unit 2, 36 Liverpool St

Ingleburn NSW 2565

Ph: 1300 459 327

www.outbackclotheslines.com.au

INSTALLATION INSTRUCTIONS URBAN SERIES LOW LINE ATTACHMENT

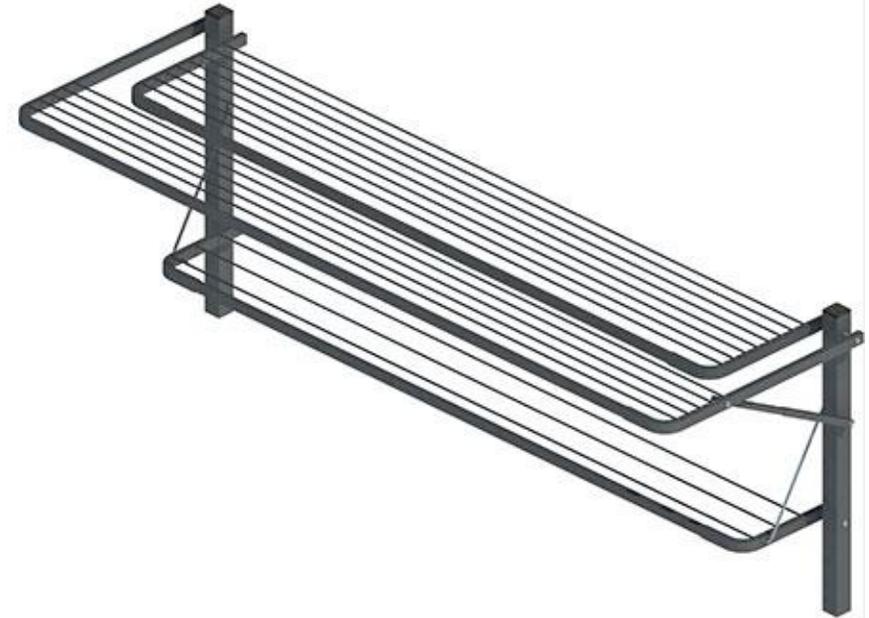

1. Fit Low Line Arm inside the leg/posts/brackets.
Insert spreader bar between both low line arms before.
securing the bolts with a 13mm spanner.
DO NOT over tighten the bolts.



Ground Mount Option



Bifold with Low Line Option

2. After installation of the spreader bars and cord, the wire hanger can be hooked on to the brackets or post.

This allows the Low Line attachment to move individually. It can be unhooked at any time and folded out of the way when not required.

Keep in mind that should you wish to lower the main clothesline ensure that you unhook the low line kit first and then proceed to un-hooking the main clothesline.

